



350 S. St. Charles St. Jasper, In. 47546  
Ph. 812.482.2932 Fax 812.634.6632  
[www.ridetech.com](http://www.ridetech.com)


**Part # 11320700**  
**78-88 GM "G" Body Black Series Rear Shock Kit**

**Components:**

- 2 20000008 Black Series rear shock – eye/T-bar
- 2 MON33082 hardware kit

**Hardware:**

- |   |          |                       |                |
|---|----------|-----------------------|----------------|
| 4 | 99311001 | 5/16" x 1" USS bolt   | Shock to frame |
| 8 | 99313002 | 5/16" SAE flat washer | Shock to frame |
| 4 | 99312003 | 5/16" USS Nylok nut   | Shock to frame |

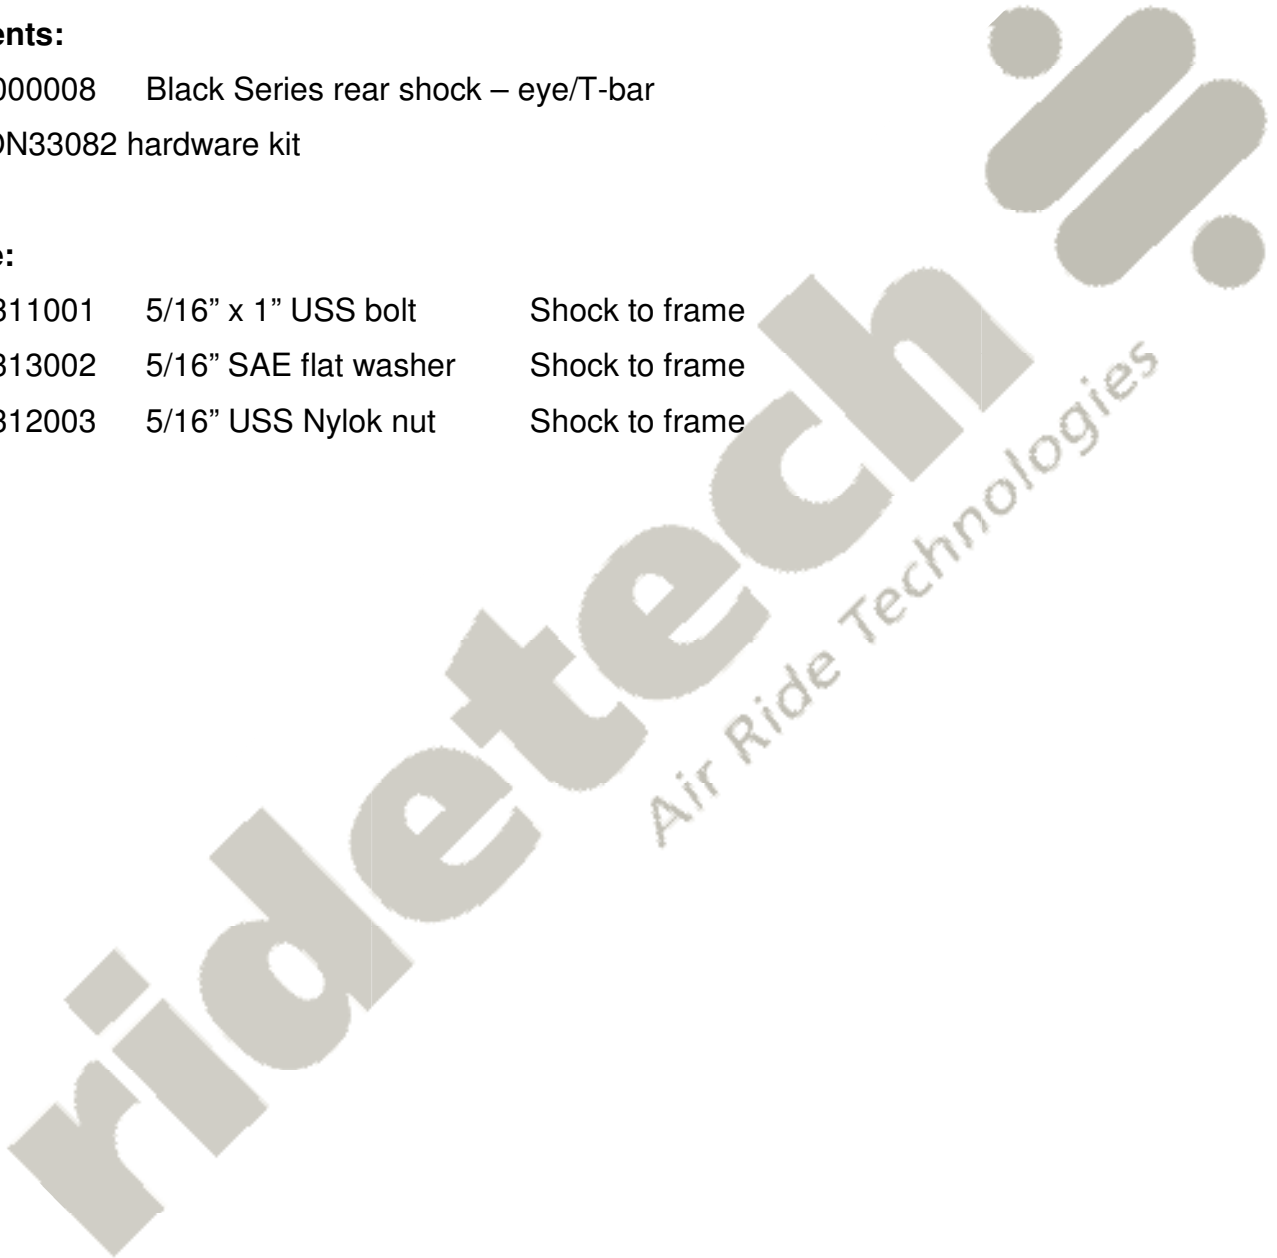

## Installation Instructions



1. Attach the upper T-bar to the frame in the oem location using the supplied 5/16 x 1" USS bolts, washers and Nylok nuts.



2. Attach the shock to the axle using the new cantilever pin supplied.